

MODIFICATION INSTRUCTIONS

for the

Kodak X-Omat 1000A PROCESSOR

Service Code: 3482

for the

Kodak X-Omat 1000 and 1000J PROCESSORS

Service Codes: 3485

Modification No. 3

Type 1 Required

Purpose: To install the new BRACKETS.



Important

Use qualified personnel to install this modification.

Service Effects: Add to the SERVICE MANUAL, Publication No. 9B8949, Section 4.

Special Requirements: None

Serial Numbers: 1000 PROCESSOR: 100-863
1000A PROCESSOR: 100-361
1000J PROCESSOR: 100-480

Installation Time: 1/2 hour

Special Tools: None

Parts Status: Available from Service Parts Management at no charge until May 1, 2000.

Parts Requirements: See Page 2.



HEALTH IMAGING

A horizontal line with three thick black bars redacting an address.

PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.




This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

MODIFICATION KIT 1E2463 includes:

Part No.	Description	Qty.	Notes
1E2294	BRACKET A	1	DRYER-END
1E2295	BRACKET B	1	DEVELOPER-END
1E2903	SCREW	2	Type A, M3 x 6
7C8765	REIMBURSEMENT CARD	1	U.S. Dealers Only
3E0802	MODIFICATION INSTRUCTIONS	1	

Installing the New BRACKETS on the MAIN DRIVE SHAFT

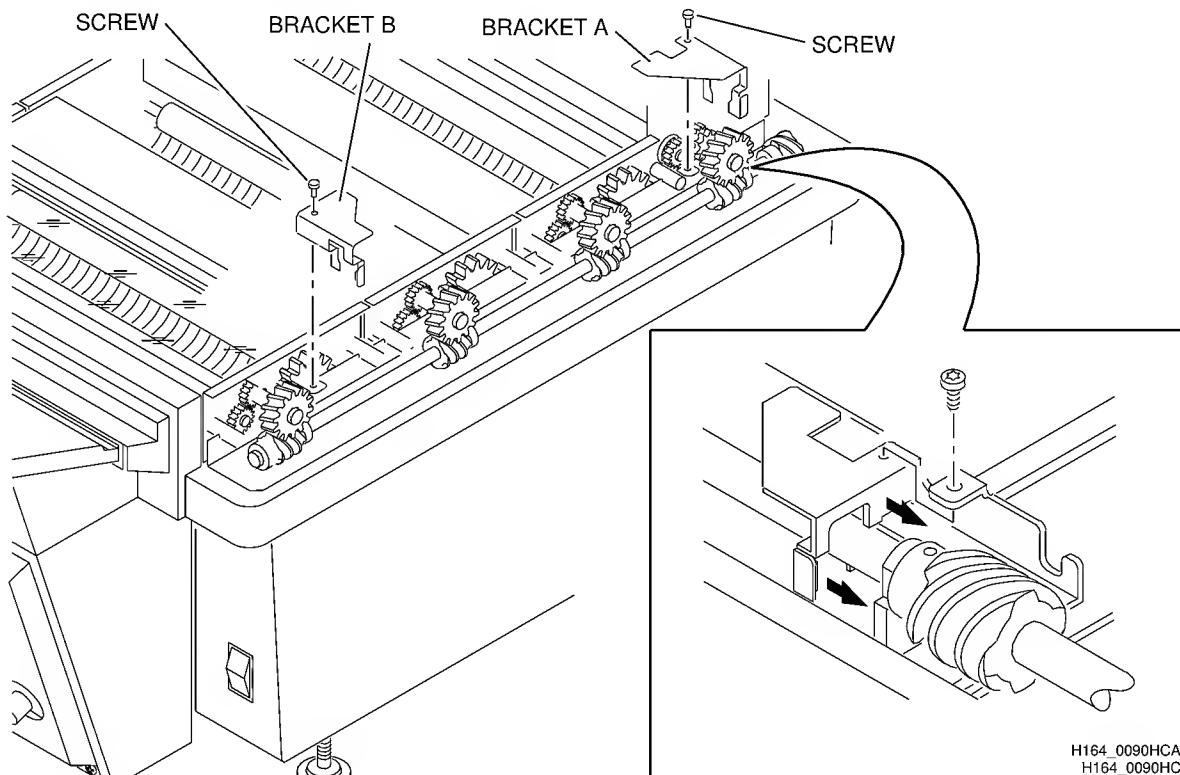

Warning Dangerous Voltage

- [1] De-energize the PROCESSOR.
- [2] Disconnect the main power from the PROCESSOR.
- [3] Remove:
 - TOP COVER
 - CROSSOVERS
 - All RACKS
 - DRYER
 - existing BRACKETS
 - E-RINGS from the MAIN DRIVE SHAFT, if installed

- [4] Use the 2 new SCREWS to install:
 - BRACKET A
 - BRACKET B

- [5] Circle "3" on the MODIFICATION LABEL inside the CONTROL BOX.
- [6] Assemble the PROCESSOR.



Warning Dangerous Voltage

- [7] Connect the main power to the PROCESSOR.
- [8] Energize the PROCESSOR.
- [9] Check that the PROCESSOR operates correctly.
- [10] Fill out and return the REIMBURSEMENT CARD.

Publication History

Print Date	Publication No.	ECO No.	Affected Pages	File Name	Notes
26APR99	3E0802	N/A	All	ma3482_3_26apr99.fm	First printing

Kodak and *X-Omat* are trademarks.

